


## WATER PROOFING METHODOLOGY:

- 1. Removal of Top Screed from the Mother Slab.
- Cleaning of the Mother Slab with Hard Brush & Removal of Dirt from the Surface with Air Blowers
- 3. Applying of the Fosroc RFX Brush Bond Coating on the mother slab with Brush in Clock wise directions & on all 4 Sides Walls till 1200m.m Height. If the Floor is raised 300m.m
- 4. After drying of the 1st Coat of the Brush Bond Coating. 2nd Coat is applied in the Anticlockwise
- 5. After drying of entire Surface say 24 Hours. we will fill Water to 6 Inch Levels for Ponding Testing
- 6. Water will be kept for observations for 72 Hours. If Leakage is observed. Water is emptied
- Above Procedure is Repeated.
- 8. If No Leakage is observed after 72 Hours. Water will be drained out from the Floor Surface
- 9. Protective Screeding mixed with FOSROC NITOBOND SBR of Average 25m.m thickness will be laid above water Proofing Surface with coving & Wall junction.
- 10. After Dryings of Protective Screed say 2 Days. Drain Lines are laid on the Floor with Slope
- 12. After this floor raising by Light Seaproax block will be achieved followed with flooring material as

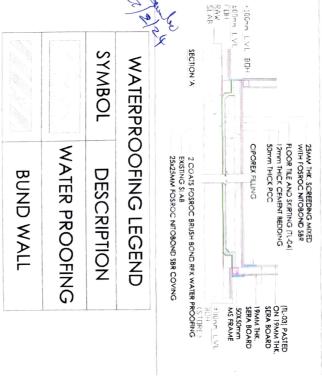

SIGN	DATE	PROJECTS	WATER PROOFING - LAYOUT
SIGN	DATE	FIRE OFFICER	NG - LAYOUT
			क्र
SIGN	DATE	C00	INHOUSE DESIGN

NTS.